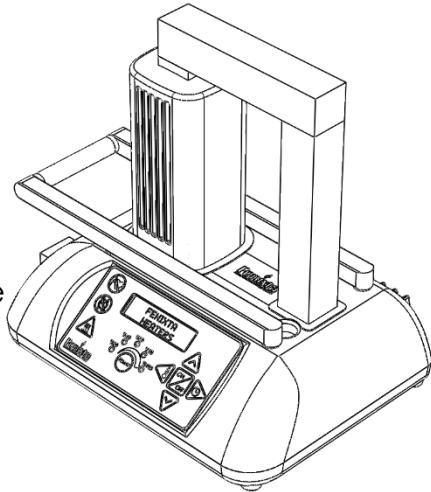


Quick Start Guide

V1.0


<https://www.fenixta.com>

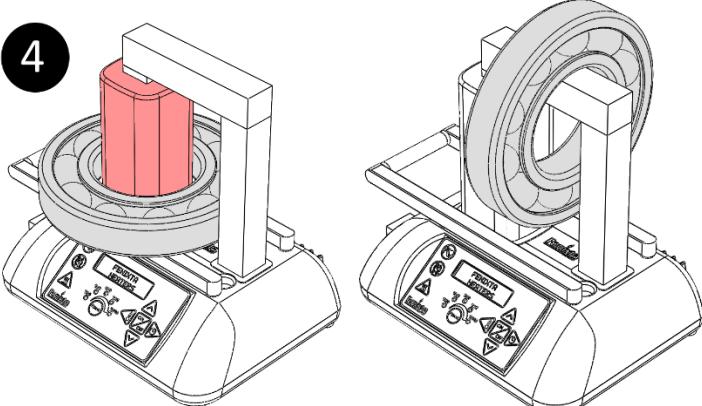
This content is subject to change without prior notice.


1

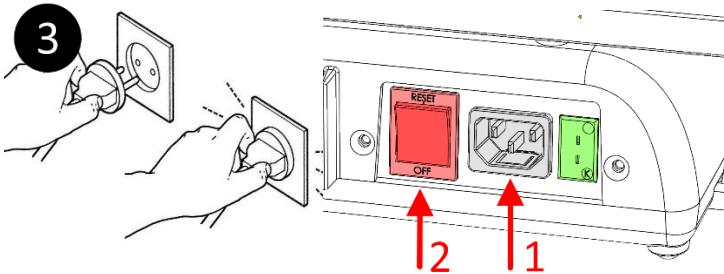

Scan the QR for tutorials, user manual, and more.

<https://www.fenixta.com>
2
Important Safety Notes

- Read the user manual first; it could be crucial for safety.
- Strong magnetic field.
- Hot surfaces.

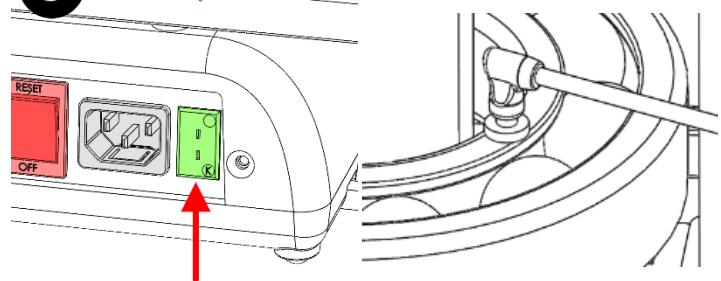

4


Insert the bearing or workpiece. If it is large enough, place it in the turbo section. Ensure the yoke is properly positioned.

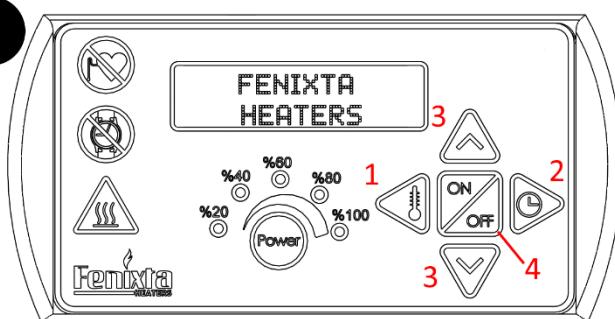


(1) Connect the power cord to the machine and to a suitable power source.

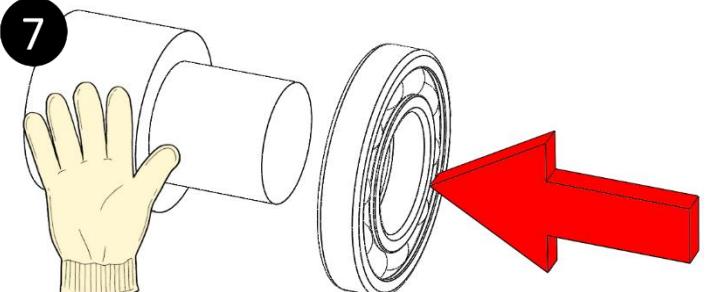
(2) Turn the power switch to the ON position

5


Plug the temperature sensor into the socket. Attach the magnetic sensor tip to the inner ring of the bearing

6


Select (1) the temperature mode or (2) the time mode. Use the (3) arrows to adjust the time or temperature. Press the (4) on/off button to start heating.

7


When the heating process is complete, the device will emit an audible alert. Put on your gloves, remove the magnet and yoke. Place the bearing onto the workpiece without delay.



